

Voyager+ Cargo Lift Order and Placement Guide



Measuring Your Travel

Measure from the lowest point on the ground of your bottom level to the landing floor of your top level. This is your travel distance. If the ground is not level please make a note on your order.

This measurement must be exact!

Clearances

It is recommended that you allow at least 2" of clearance around each side of the basket. You will also need at least 60" of open space vertically above your top landing for the head assembly.

Gate Openings

Gate Positions are determined by their relation to the Travel Beams.

To select your gate positions look into the area where your basket will go from the perspective of your beams.


Position #1 is on your left

Position #2 is across from you

Position #3 is on your right

You can select multiple openings.

The diagram shows a basket with a #1 Gate Opening

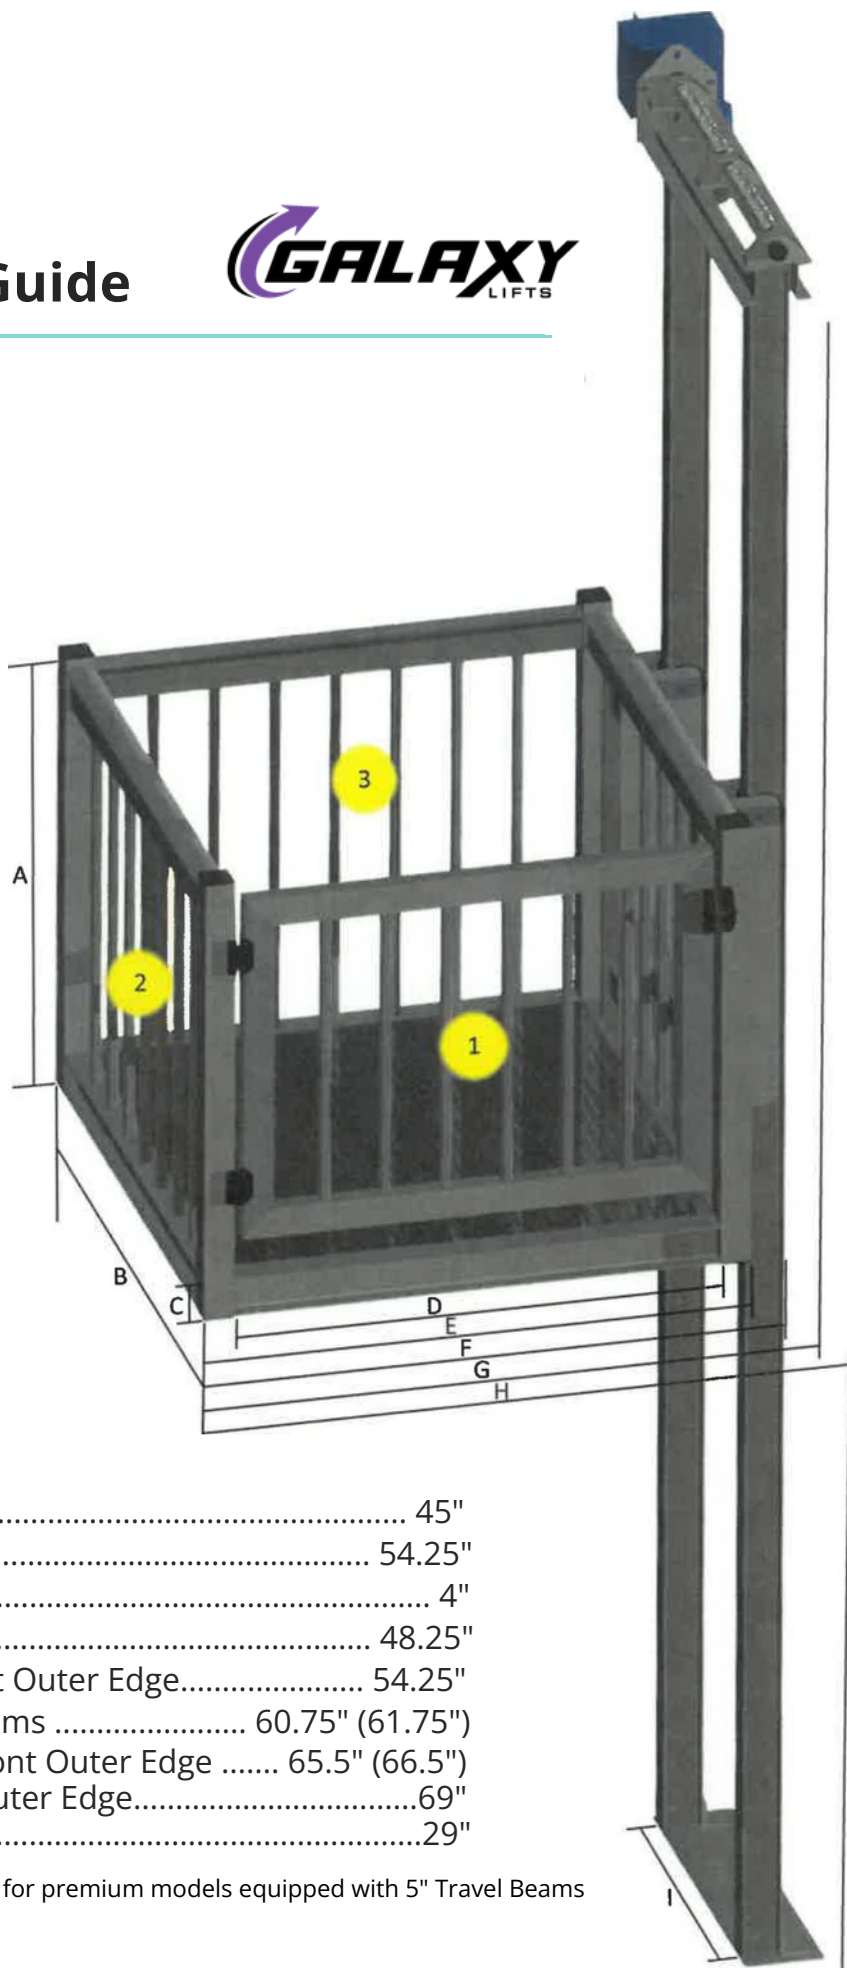

Lift Dimensions

A	Height of Hand Rail Sides	45"
B	Outer Side-to-side width	54.25"
C	Floor Thickness	4"
D	Front to Back Interior Width	48.25"
E	Rear Outer Corner of Basket to Front Outer Edge.....	54.25"
F	Front of Basket to Back of Travel Beams	60.75" (61.75")
G	Back of Head Assembly to Basket Front Outer Edge	65.5" (66.5")
H	Back of Footplate to Basket Front Outer Edge.....	69"
I	Beam Width (center to center).....	29"

*** Alternate dimensions that are in parenthesis are for premium models equipped with 5" Travel Beams